 




DHC Supplies, Inc
 1095 Spice Island Dr #109
 Sparks, Nevada 89434
 800-323-2999
 775-358-5797 (Fax)
[Website](#)

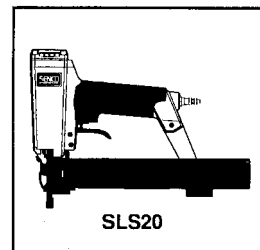

Repair Kit - YK0372

Document No. NC1034
 Issued November 5, 2003
 © 2003 by Senco Products, Inc.

SLS20

 
Safety Warnings • Avisos de Seguridad • Sicherheitshinweise • Consignes de Sécurité




- Read your Operator's Manual before performing maintenance on the tool.
- Lea su manual de operación antes dar mantenimiento a la herramienta.
- Lesen Sie vor Wartungs- und Instandhaltungsarbeiten die Betriebsanleitung.
- Lisez votre manuel de maintenance avant toute intervention sur l'appareil.




- Always wear OSHA required "Z87" safety glasses with permanently attached rigid, hard plastic side shields.
- Use siempre los anteojos de seguridad "Z87" requeridos por OSHA con escudos laterales rígidos de plástico duro y adheridos permanentemente.
- Bei der Benutzung des Gerätes ist UVV zu verfahren.
- Porter toujours des lunettes de sécurité homologuées avec caches latéraux en plastique rigide.

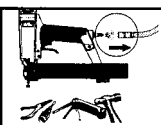

 
- Disconnect tool from air before doing tool maintenance.
- Desconecte la herramienta del aire antes de darle mantenimiento a la herramienta.
- Unterbrechen Sie die Druckluftzufuhr vor Wartungs- und Instandhaltungsarbeiten.
- Couper l'arrivée d'air comprimé avant toute intervention sur l'appareil.

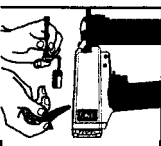

 - Do not tamper with or remove safety element, trigger or springs.
- No maneje indebidamente o remueva la seguridad, el disparador o los resortes.
- Benutzen Sie das Gerät nicht zweckentfremdet; entfernen Sie nicht die Sicherheitsvorrichtung, den Abzug oder die Federn.
- Ne pas altérer ni retirer les pièces de sécurité telles que palpeur de sécurité, ressort ou gâchette.

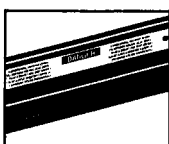


- If danger label is missing, damaged or unreadable, contact your SENC0 representative to obtain a new label.
- Si la etiqueta esta dañada, no se puede leer o faltacompletamente. Comuníquese con su representante de SENC0 para obtener una etiqueta nueva.
- Fordern Sie einen neuen Sicherheitsaufkleber bei Ihrem SENC0-Händler an, wenn dieser fehlt oder beschädigt bzw. unleserlich ist.
- Si l'étiquette est manquante, endommagée ou illisible, prendre contact avec votre représentant SENC0 pour en obtenir une autre.

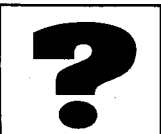 

- Questions? Contact your SENC0 Representative. In the U.S.A. call: **1-800-543-4596.**
- Cualquier pregunta? Contacte su representante SENC0. En U.S.A. llamar al **1-800-543-4596.**
- Haben Sie noch Fragen? Sprechen Sie Ihren SENC0-Händler an!
- Questions ? Contacter votre agent SENC0.

Ref.#	Description	Descripción	Beschreibung	Désignation
1.)	Screw (4)	Tornillo (4)	Schraube (4)	Vis (4)
2.)	Muffler	Silenciador	Dämpfer	Silencieux
3.)	Seal	Sello	O-Ring	Joint
4.)	Valve Assy.	Diafragma	Ventil-baugruppe	Ensemble-Valve
5.)	Retainer	Junta Tórica	Sicherungsring	Retenue
6.)	O-Ring	Sello	O-Ring	Joint
7.)	Seal	Sello	O-Ring	Joint
8.)	O-Ring	Sello	O-Ring	Joint
9.)	O-Ring	Sello	O-Ring	Joint
10.)	O-Ring	Sello	O-Ring	Joint
11.)	Insert	Acoplamiento	Einsatz	Insert
12.)	Stop	Tope	Puffer	Arrêt
13.)	Seal	Sello	O-Ring	Joint
14.)	Retainer	Junta Tórica	Sicherungsring	Retenue
15.)	O-Ring	Sello	O-Ring	Joint
16.)	Valve Assy.	Diafragma	Ventil-baugruppe	Ensemble-Valve
17.)	O-Ring	Sello	O-Ring	Joint
	Lubricant	Grasa	Schmiermittel	Graisse
	Remote Wrench	Llave de la Valvula del Gatillo	Schraubenschlüssen	Lié Hexagonale

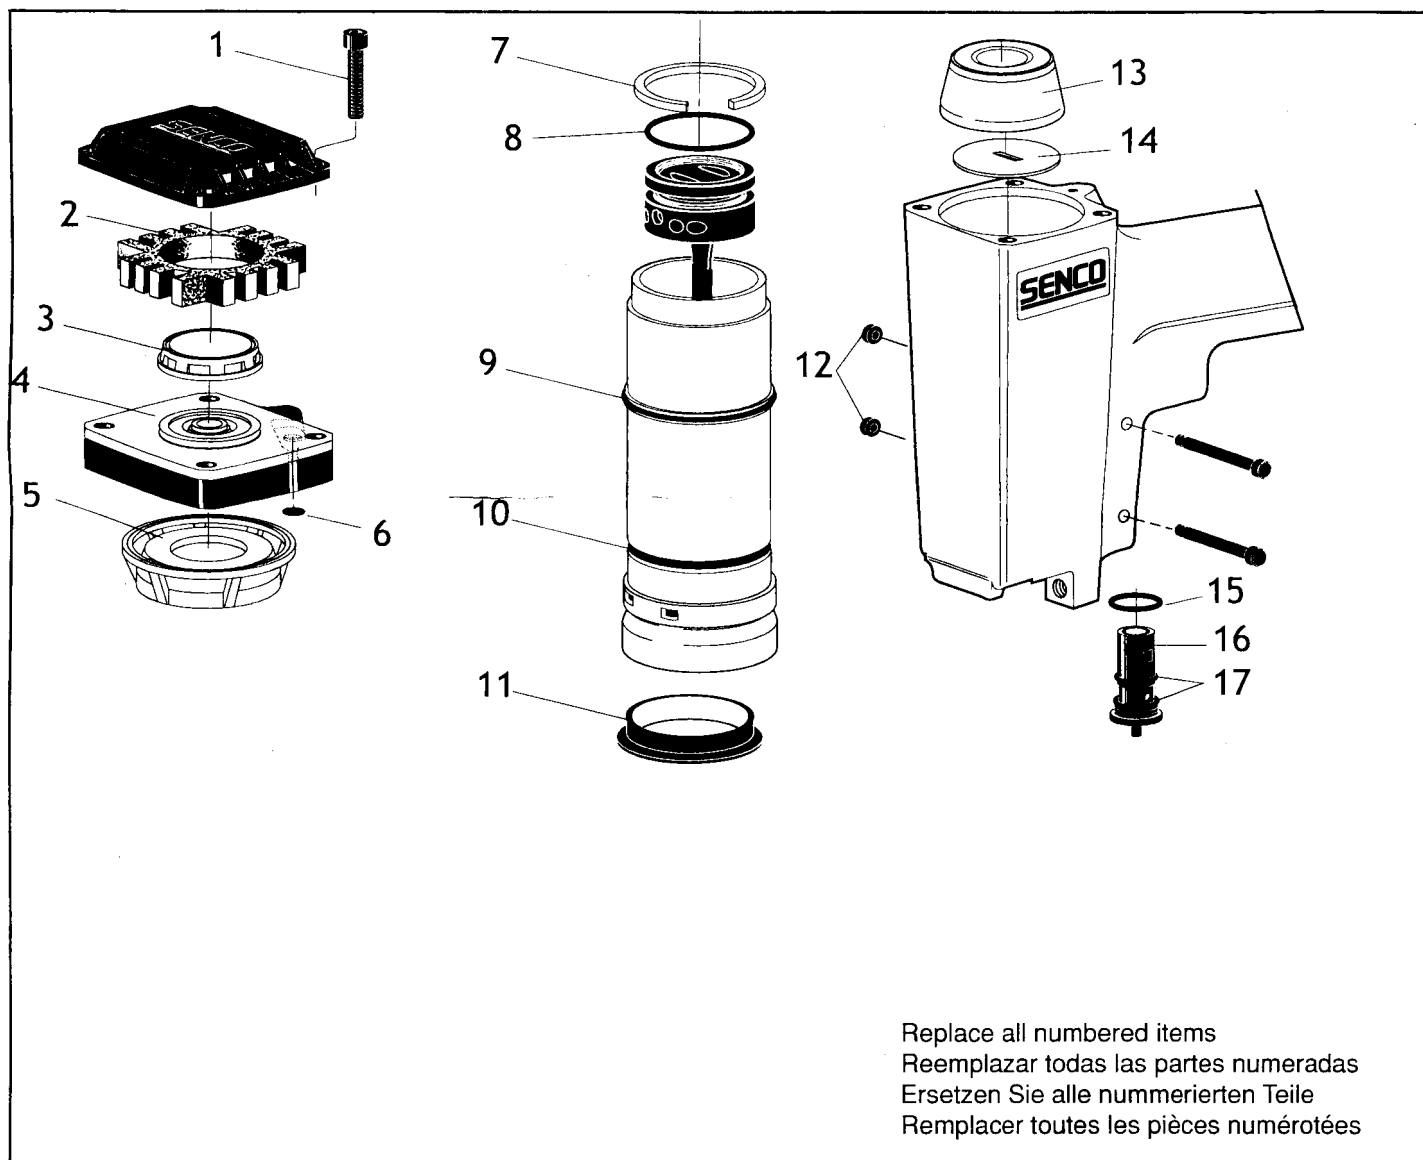 

SENCO PARTS WARRANTY

These parts have been designed and constructed using the highest standards of material and workmanship.

PARTS GUARANTEE:

The length of this guarantee is 45 days from date of shipping to the first end-user. During this period, Senco Products, Inc., will repair or replace at Senco's option, any original part or parts for the original user. This will be done free of charge provided the parts are determined defective in materials or workmanship upon examination by Authorized Senco factory personnel. (Exception: O-rings and Driver Blades)

TERMS:

This warranty will be honored only if:

- A. Clean, dry, regulated compressed air power source has been used, at air pressure indicated on the tool casting.
- B. No evidence of abuse, or failure to follow recommended optional maintenance, or modification of the tool or parts is present. (Read Operator Manual for use and maintenance instructions.)
- C. When repair or replacement of parts is necessary, the user returns the complete part, with transportation prepaid, to the nearest Factory Authorized Service Center, with purchase receipt or other proof that the part is within the warranty period.

THE FOREGOING WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES

ALL OTHER WARRANTIES, WHETHER ORAL, WRITTEN, EXPRESS, OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE SHALL NOT APPLY TO THE WARRANTIES EXTENDED WITH THESE PARTS. THESE OTHER EXPRESS OR IMPLIED WARRANTIES ARE SPECIFICALLY EXCLUDED. BUYER'S OR USER'S REMEDIES ARE SOLELY AND EXCLUSIVELY AS STATED HEREIN. SENCOPRODUCTS, INC. SHALL IN NO EVENT BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, OR SPECIAL DAMAGES RESULTING FROM FAILURE OF THIS WARRANTY.

IN NO EVENT, WHETHER AS A RESULT OF BREACH OF CONTRACT, WARRANTY, TORT (INCLUDING NEGLIGENCE) OR OTHERWISE, SHALL SENCOPRODUCTS, INC. BE LIABLE TO THE PURCHASER OF THESE PARTS OR ANY LOSS OR DAMAGE ARISING OUT OF THE BREACH OF WARRANTY, CONTRACT, OR TORT, EXCEED THE PRICE OF THE PART WHICH HAS GIVEN RISE TO THE CLAIM OR LIABILITY. ANY LIABILITY CONNECTED WITH THE USE OF THESE PARTS SHALL TERMINATE UPON THE EXPIRATION OF THE WARRANTY PERIOD SPECIFIED ABOVE.

©1984, 1992 by Senco Products, Inc.